



A

DVD MODULE (IN/OUT) CIRCUIT

— : +B SIGNAL LINE

▨ : CD-DA SIGNAL LINE

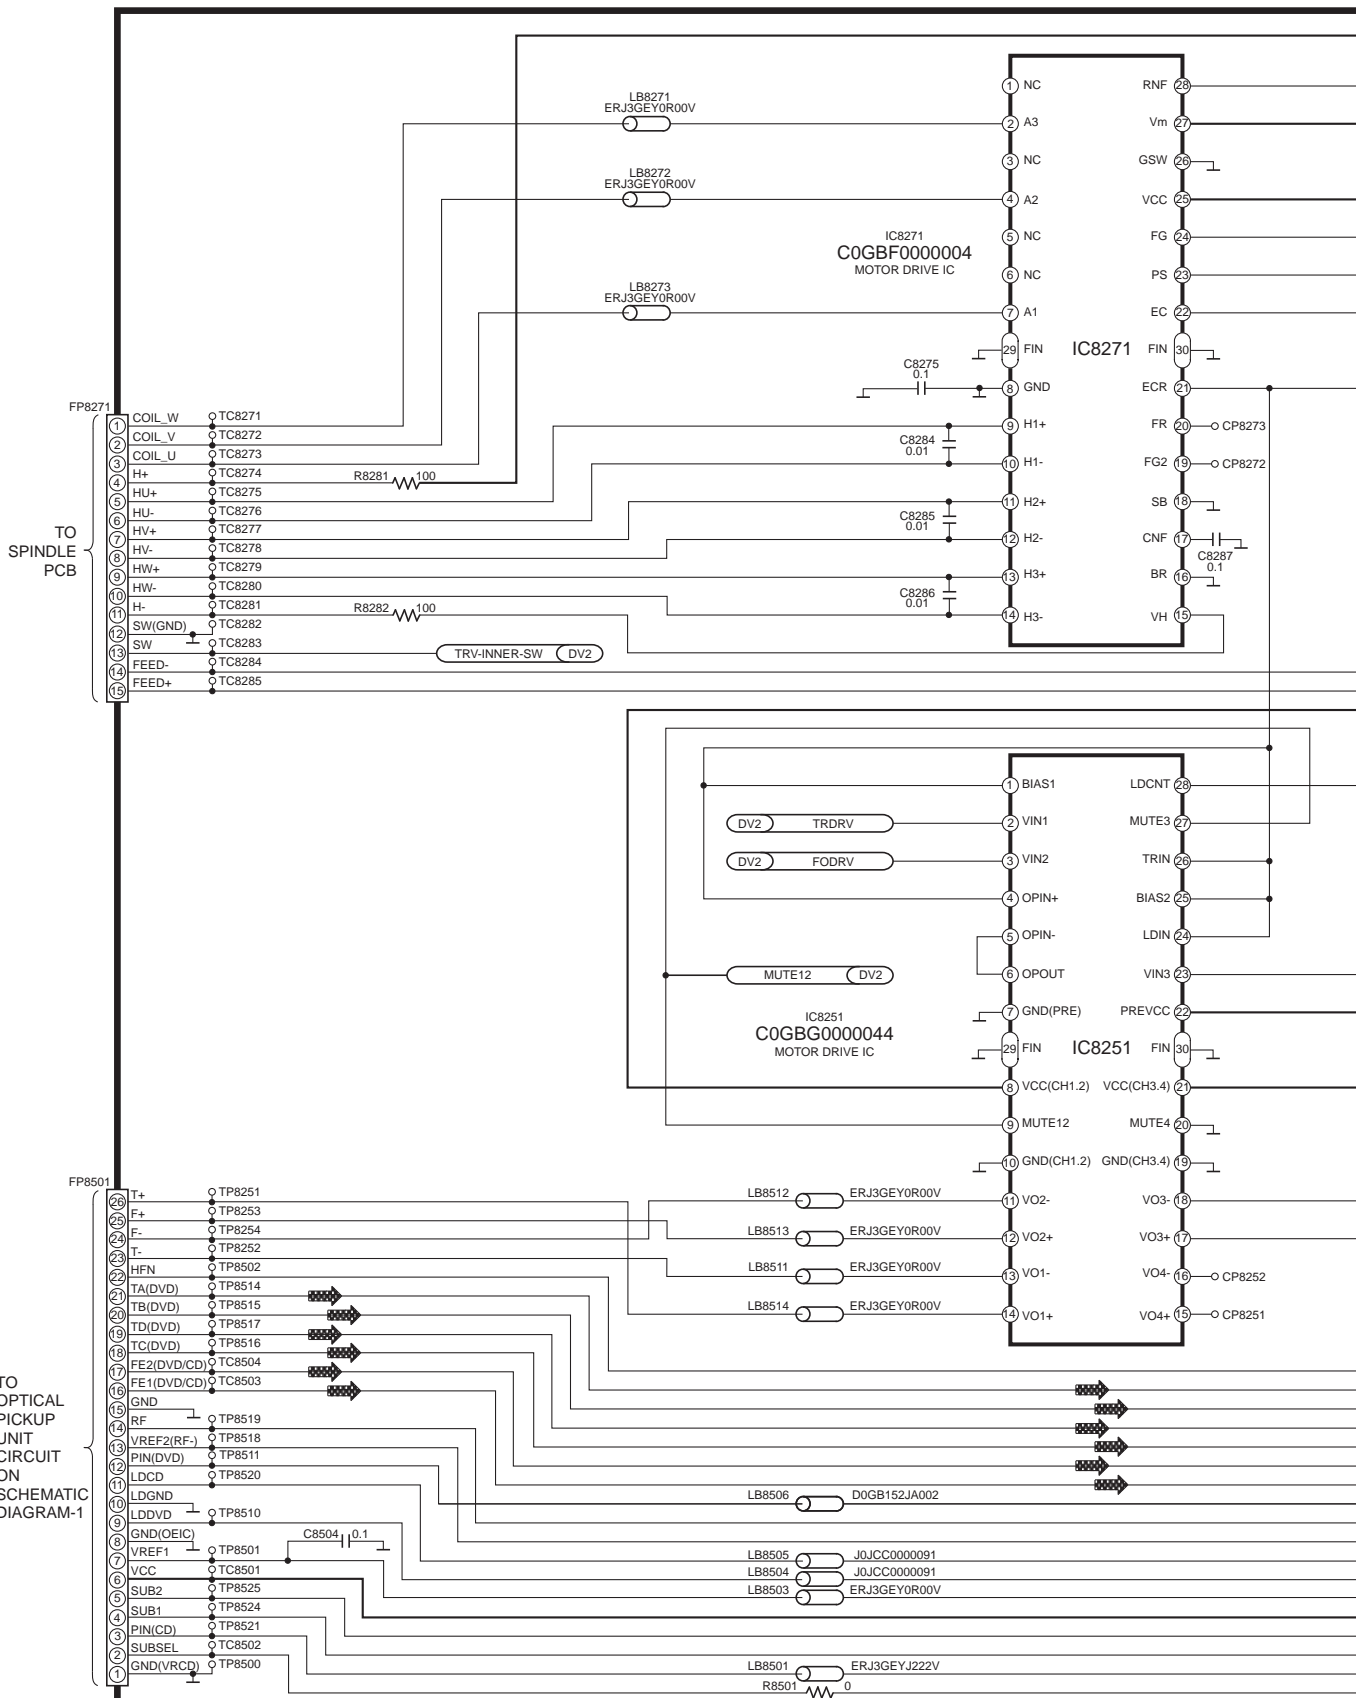

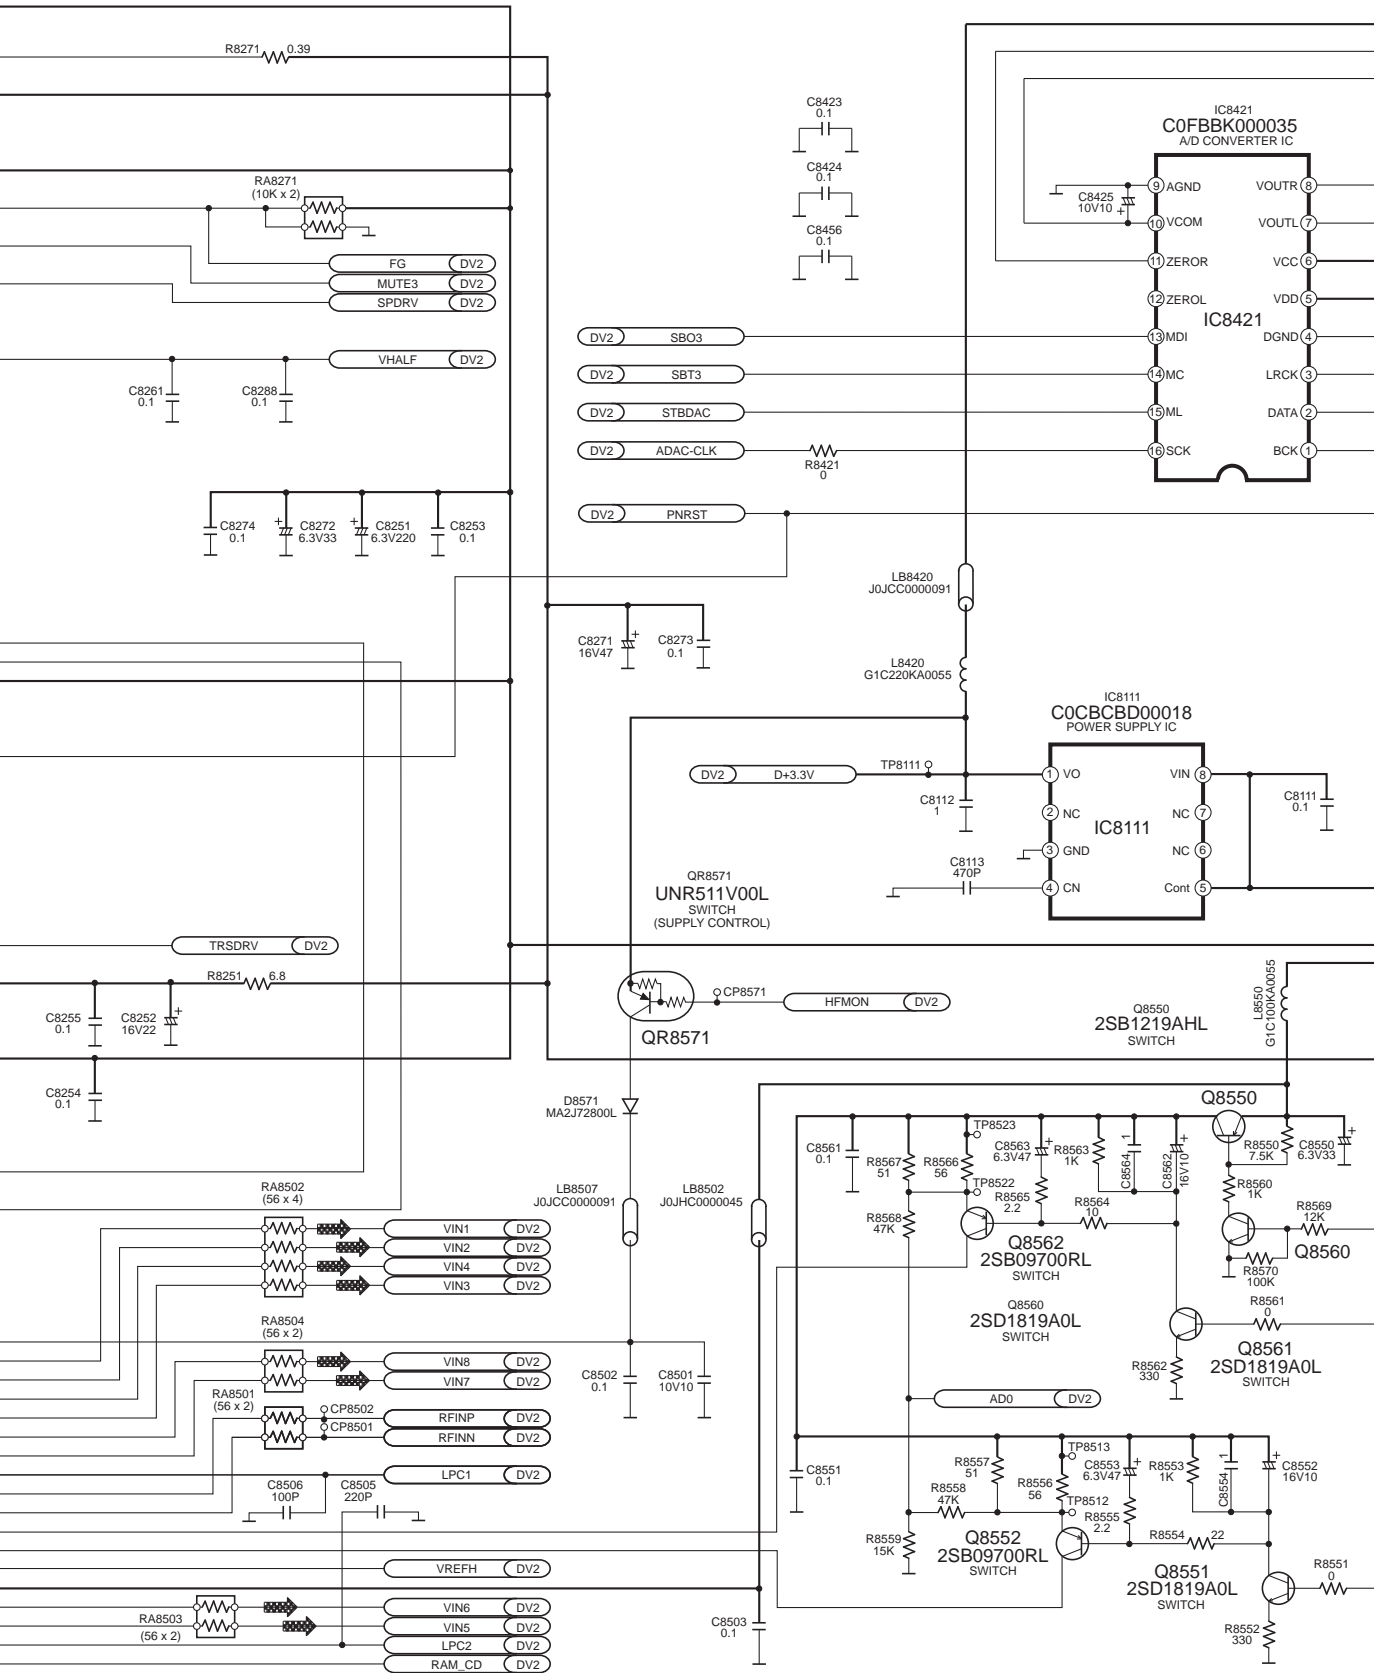

SCHEMATIC DIAGRAM - 4

A


DVD MODULE (IN/OUT) CIRCUIT

⇒ : MAIN SIGNAL LINE

— : +B SIGNAL LINE

⊞ : DVD AUDIO SIGNAL LINE

⊞ : DVD VIDEO SIGNAL LINE

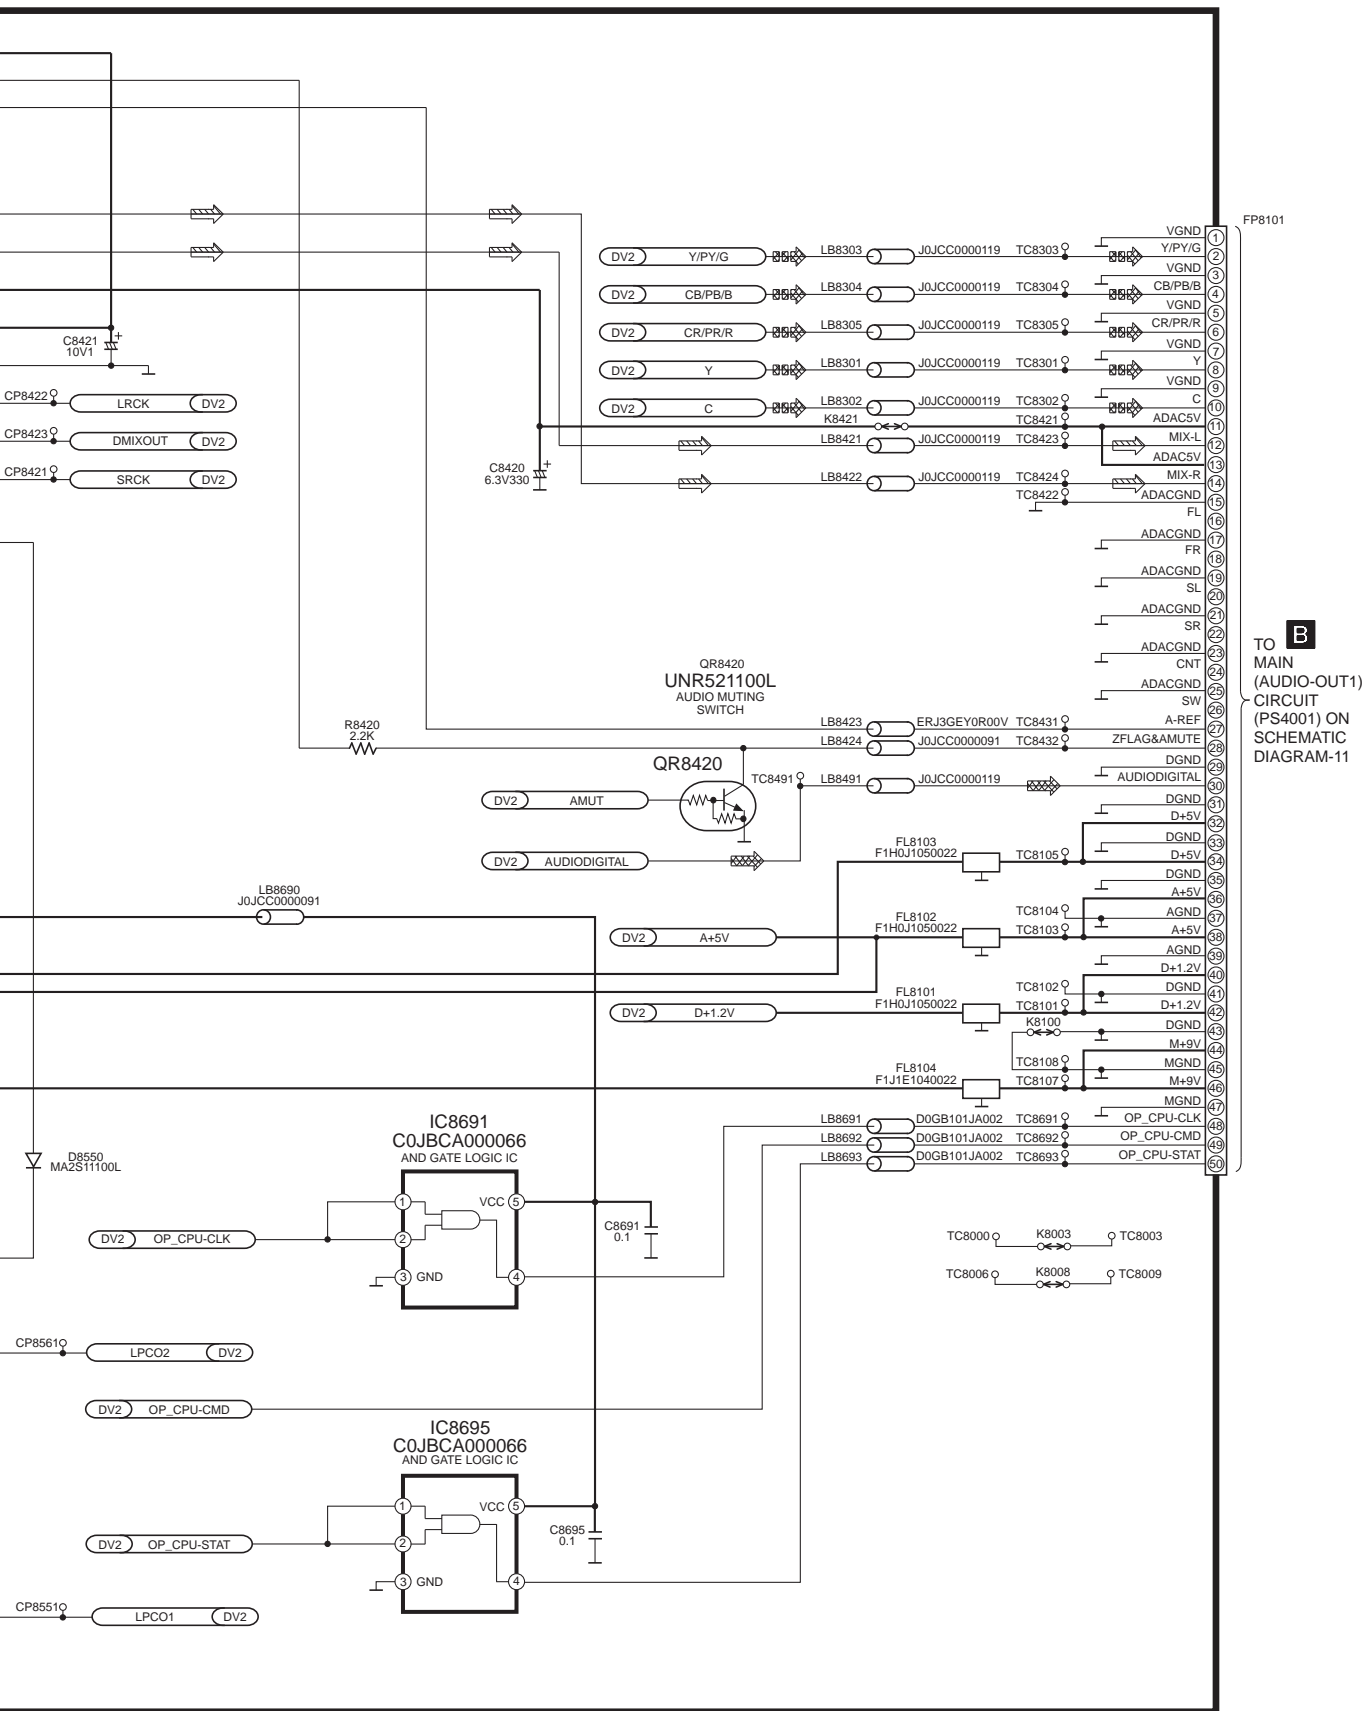

B
TO MAIN
(AUDIO-OUT1)
CIRCUIT
(PS4001) ON
SCHEMATIC
DIAGRAM-11